

spinlock

BE ADVENTURE-PROOF

DURO SOLAS ACR 400 PLB Fitting Instructions



1 Find zip car and open flap.




2 Unzip the lifejacket to shoulder.




3 Fix ACR mounting clip to oral tube as shown.




4 Fit retaining band to mounting clip.

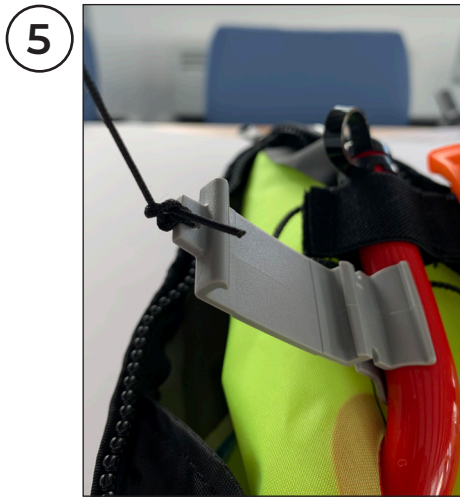

5 Attach string to mounting clip.

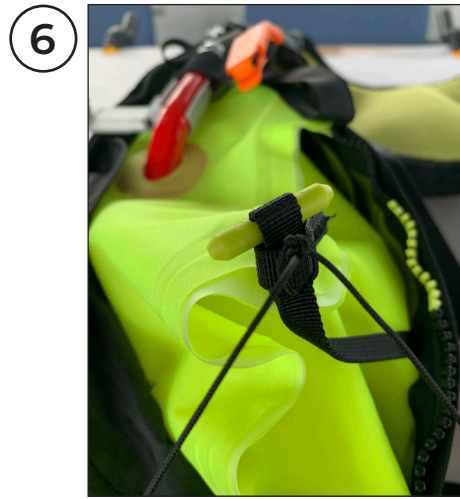

6 Attach other end of string to toggle point of lifejacket, set to 30cm and trim excess.

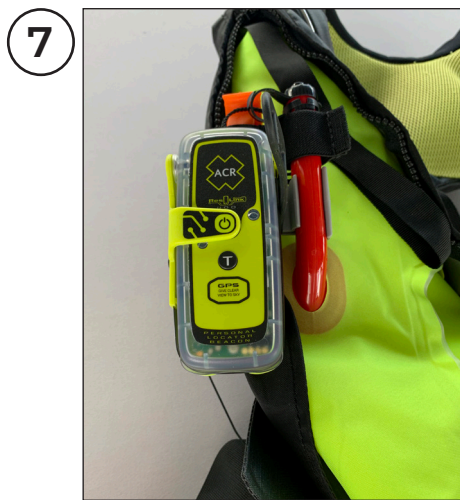

7 Clip PLB to mounting clip as shown.



8 Place PLB so that side is facing up and firing head secure in yellow mesh pocket. Carefully zip up lifejacket.



9 Tidy zip car and carrier into cover.